




PALLADIAN 4-HOLE DECK MOUNT TUB FILLER WITH HANDSHOWER

Rohl Transitional Palladian


A1904LM (Metal Levers) A1904XM (Cross Handles)

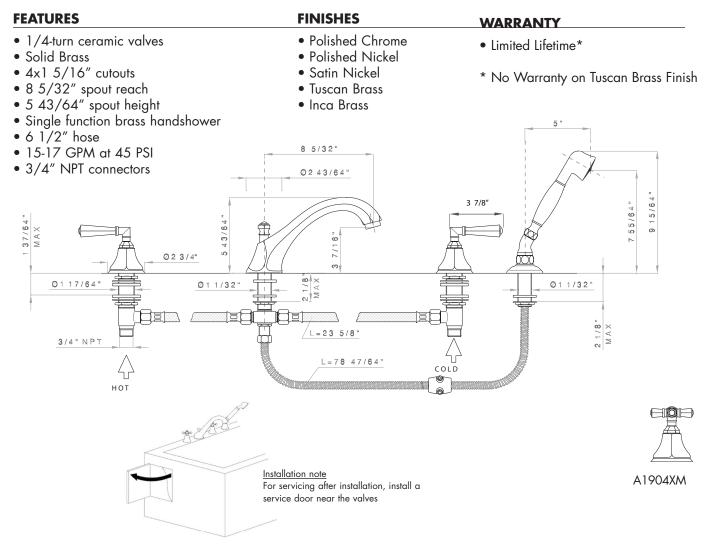



www.rohlhome.com



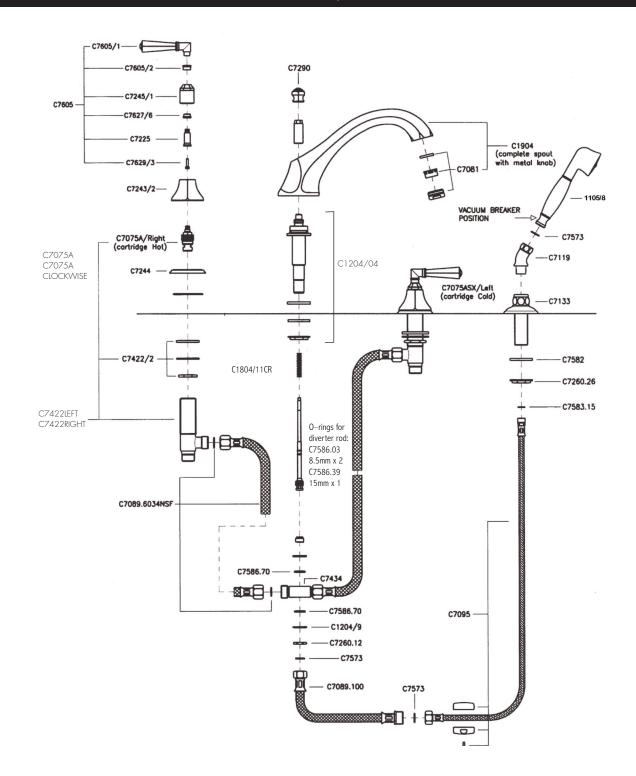




Installation Instructions

INSTALLATION AND CARE & MAINTENANCE GUIDE Installation guide

Bath mixer on edge type with 3 holes Art. A1984LM--

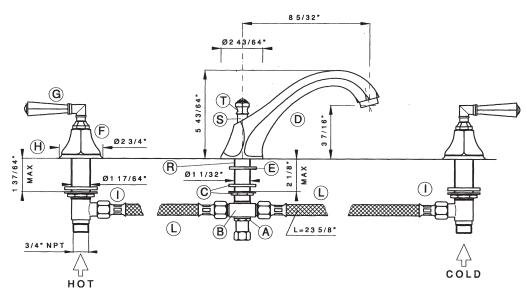

Installation must comply with local plumbing codes

a - Preparation Flush out the pipework to remove any foreign matter. The hot supply should be on the left when viewed from the front of the fitting. b -Assembly - Disassemble the nut (A), the T connection (B) and the fixing kit (C). - Introduce the spout shank (R) in the hole of the deck, placing the rubber washer (E), between the base of the shank and the deck. - Fix the shank (R) the washer and then the metal nut with disk. - Introduce the spout body (D) in the spout shank (R) and tighten, using the block connection (S) and then the knob (T) - Assemble the T connection (B) placing, then the metal ring first and then the O - ring washer. - Fix the T connection (B), then the O - Ring, the metal ring and the nut (A). - Unscrew the cover valve (F) and extract the handle set (G). Unscrew the cap (H). Assemble the valve body (I), placing the metal nut with disk and then the rubber washer. - Introduce the valve body (I) in the hole of the deck and tighten, placing the O - Ring washer and the escutcheon. - Assemble the handle (G) screwing the cover valve (F). ATTENSION: Be sure the handle has no play. - Lock the valve body (I) from the underside with the brass nut.



www.rohlhome.com

Installation Instructions

	ATTENTION
	Maximum fixing nut torque value = 10 lbf.ft.
	epeat this procedure for the cold valve.
	onnect the hot and cold valve body (I) to the \top connection (B) using the flexible hoses (L)
	nd placing the washer between the two parts.
	onnect hot and cold water supplies to side valve inlet.
- EI	nsure all connections are firmly tightened.
с	– Before use
Turr	n on the Hot and Cold supplies to the faucet.
	imum temperature for Hot water supply to the faucet is 145° F.
	mum recommended pressure is 15 psi 🛛 – Maximum recommended pressure is 75 psi.
	ck the installation carefully for leaks.
	rther building work is to be carried out, the faucet should be covered to prevent paint, adhesive,
erc.	from damaging the surface.
C٤	are and use for finishes
sp so 40	ter each use, pat the fixture down to remove any excess water. This will prevent any water otting or mineral build-up. Use only soft liquid soap and water to clean the surface. Use a ft brush to clean any gaps. Avoid any products that have ammonia or alcohol like Windex, 9 or Fantastik. These products can damage the finish leaving black or white spots. Never use abrasive product like Softscrub, Comet, Ajax or Bon Ami.
Fo	r deep polishing we recommend Bruno's Wax for all finishings.
of	scan Brass is a living finish and has no warranty. It will lighten with use. To extend the life the finish, apply Bruno's Wax by patting it on, letting it dry and patting it off. Never rub or ff this finish.
WA fai	RNING: the use of cleaning products not recommended might irreparably harm the surfaces of the ucets which in such case are not covered by our warranty.
Liı	nescale
The	faucet is fitted with an aeration device in the Hot/Cold water outlet.
	may need occasional cleaning especially in hard water areas.
	is accomplished by unscrewing the outlet in a counter clockwise direction, dismantling and
locu	ing the inner screen mesh immersed over night in vinegar or lemon juice.
	not use chemical descaling liquids for this purpose.

www.rohlhome.com



Installation Instructions

ATTENTION

READ THESE INSTRUCTIONS BEFORE INSTALLATION AND USE OF ALL FAUCETS AND WALL VALVES

INSTALLATION and WARRANTY INSTRUCTIONS TECHNICAL INFORMATION

All flexible hoses are designed and manufactured for use with water in exposed locations only. **Do not expose** to household cleaners, chlorine, cloride, hydrochloric acid or other corrosive chemicals.

- All connections with threads M10x1 male must be hand tighten. Do not over tighten. Over tightening may cause damage to the hose.

All faucets washers and o-rings are designed and manufactured for use with water. **Do not expose** to household cleaners, chlorine, cloride, hydrochloric acid or other corrosive chemicals.

Faucets are designed for use with the tempratures and pressures listed below:

- minimum cold water supply 50 °F
- maximum hot water supply 145 °F
- minimum pressure 15 psi
- maximum pressure 75 psi
- maximum fixing torque value = 10 lbf.ft.

Please note: The recommended best pressure for best performance is between 40 psi and 60 psi. More pressure than 60 psi or less pressure than 40 psi may affect the diverting action in side spray faucets.

- Do not use any Rohl Country/ Nicolazzi faucet with sulphorous water.
- □ The minimum temperature for all faucets is 50 degrees F. Below 50 degrees F will void the warranty.
- □ When available, filter systems must be placed between hot and cold supply lines and the faucet. Improper use or non-use of filters may make diverting faucets with hand sprays perform poorly.
- Don't modify faucet and their components
- Use only original spare parts if there are replacements to be ordered.
- Installation must be made by authorized plumbers or installers. Improper installation or diagnosis of problems is not covered by the warranty.
- Yearly maintenance of cleaning and flushing is recommended.

Operation and use of any faucet or wall valve that do not conform to these technical instructions will void the warranty.