


# PHYLTRICH®

Defining Luxury Since 1959

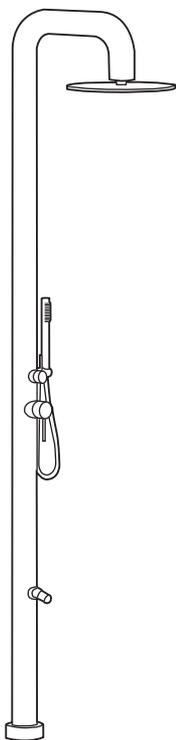

---


## INSTALLATION INSTRUCTIONS FOR Outdoor Shower

▪ OUTDOOR SHOWER

WE RECOMMEND THAT ALL PLUMBING PRODUCTS BE INSTALLED BY LICENSED PROFESSIONAL  
2 PERSONS RECOMMENDED IN DOING THIS JOB

NOTE: BEFORE STARTING WITH THE INSTALL, DETERMINE FIRST THE LOCATION AND THE CORRECT MEASUREMENT OF THE SUPPLY LINES. USE THE SUPPLY LINE PAGE PROVIDED.


- Ensure that the supply lines protruding from finished floor is in the **MIN-MAX** area

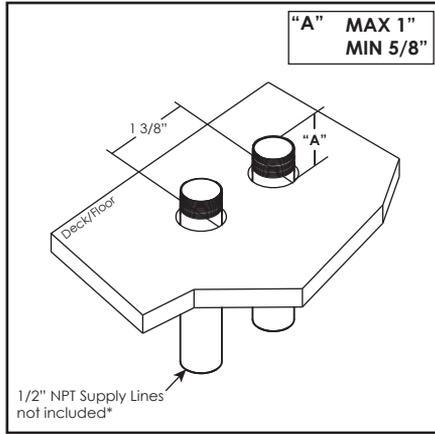


- **NOTE: ANCHORING HARDWARE NOT PROVIDED (SHOWN)**

If you are installing in "CONCRETE":  
-Anchor Stud 1/4" size recommended


If installing in "WOOD":  
-Hex Head Screw 5/16" size recommended

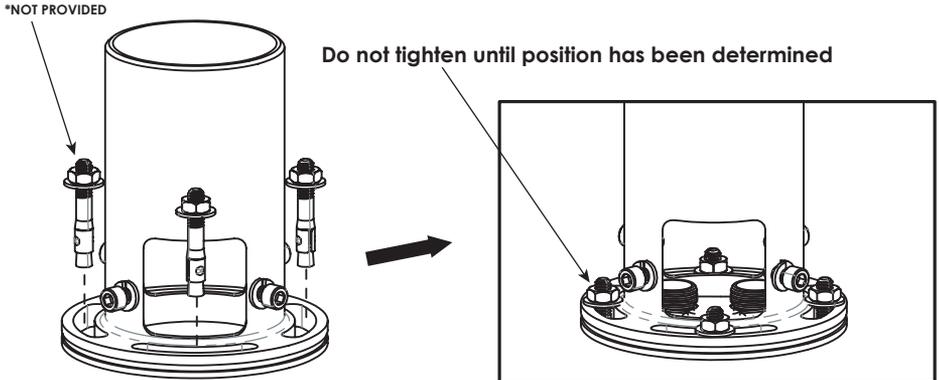

- Connect **Supply Hoses** to lines on floor.

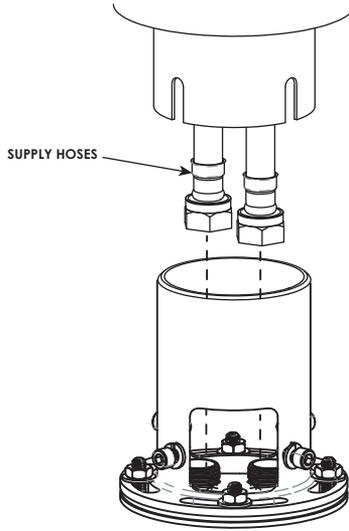

- Slide down the post and adjust the screws, Adjust **A** accordingly then tighten it up. Then adjust **B** depending on desired position. Once screws are all tightened up slide down the **Escutcheon Base** and that will end the installation.

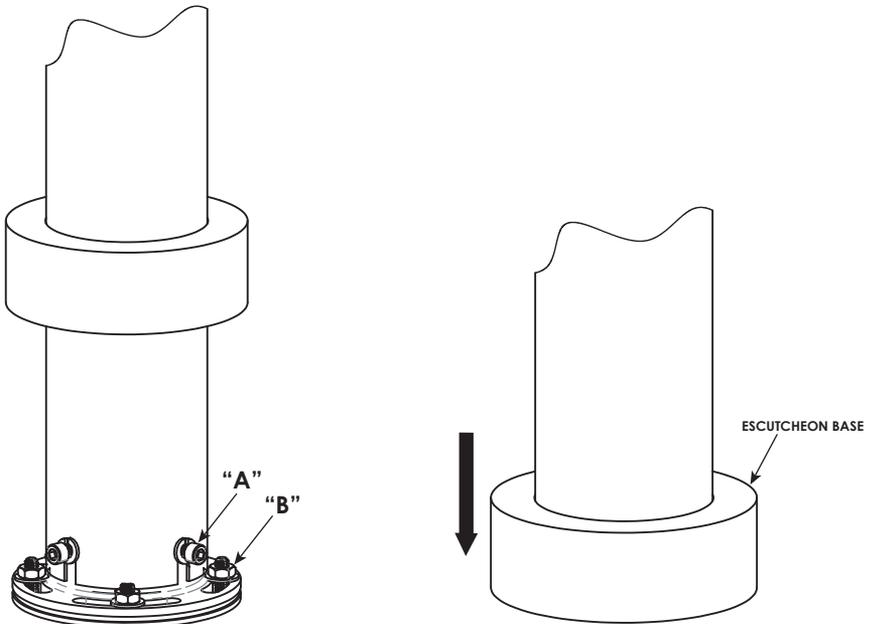

# TEMPLATE (SCALE 1:1)

# PHYLIRICH®

Defining Luxury Since 1959

## MOUNTING BASE/ SUPPLY LINES

NOTE: BEFORE STARTING WITH THE INSTALL, DETERMINE FIRST THE LOCATION AND THE CORRECT MEASUREMENT OF THE SUPPLY LINES. YOU CAN USE THIS PAGE AS YOUR TEMPLATE AS IT IS THE EXACT SCALE (1:1)

### ▪ OUTDOOR SHOWER

